

www.cap-xx.com

CAP-XX (Australia) Pty Ltd ABN 28 077 060 872 ACN 077 060 872

HW101 / HW201 SUPERCAPACITOR Datasheet Rev4.0, September 2015

This Datasheet should be read in conjunction with the CAP-XX Supercapacitors Product Guide which contains information common to our product lines.

Electrical Specifications

The HW101 is a single cell supercapacitor. The HW201 is a dual cell supercapacitor with two HW101 cells in series, so HW201 capacitance = Capacitance of HW101/2 and HW201 ESR = $2 \times HW101 ESR$.

Table 1: Absolute Maximum Ratings

Parameter	Name		Conditions	Min	Typical	Max	Units
Terminal	Vpeak	HW101		0		2.9	V
Voltage		HW201				5.8	
Temperature	Tmax			-40		+85	°C

Parameter	Name		Conditions	Min	Typical	Max	Units
Terminal Voltage	Vn	HW101		0		2.75	v
		HW201		0		5.5	v
Capacitance	C	HW101	DC, 23°C	608	760	912	mF
		HW201		304	380	456	
ESR	ESR	HW101	DC, 23°C	36	45	54	mΩ
		HW201		72	90	108	
Leakage Current	I_L		2.75V, 23°C 120hrs		1	2	μΑ
RMS Current	I _{RMS}		23°C			3.5	А
Peak Current ¹	IP		23°C			30	А

Table 2: Electrical Characteristics

¹Non-repetitive current, single pulse to discharge fully charged supercapacitor.

Table 3: Thickness

HW101F		No adhesive tape on underside of the supercapacitor	HW101G		Adhesive tape on underside, release tape removed
HW201F	2.5mm		HW201G	2.6mm	



Definition of Terms

In its simplest form, the Equivalent Series Resistance (ESR) of a capacitor is the real part of the complex impedance. In the time domain, it can be found by applying a step discharge current to a charged cell as in Fig. 1. In this figure, the supercapacitor is pre-charged and then discharged with a current pulse, I = 1A for duration 0.01 sec.

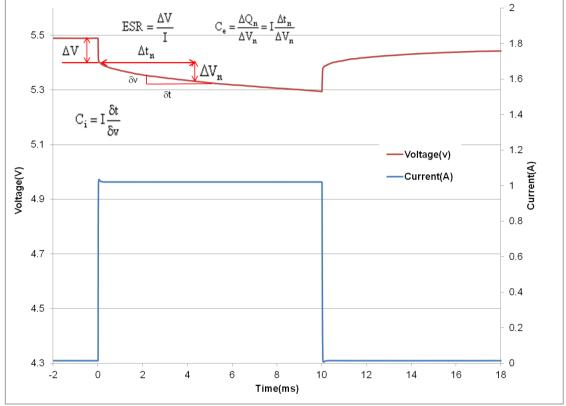


Figure 1: Effective capacitance, instantaneous capacitance and ESR for an HW201

The ESR is found by dividing the instantaneous voltage step (ΔV) by I. In this example = (5.489V-5.413V)/1A = 76m Ω .

The instantaneous capacitance (C_i) can be found by taking the inverse of the derivative of the voltage, and multiplying it by I.

The effective capacitance for a pulse of duration Δt_n , $Ce(\Delta t_n)$ is found by dividing the total charge removed from the capacitor (ΔQ_n) by the voltage lost by the capacitor (ΔV_n). For constant current $Ce(\Delta t_n) = I x$ $\Delta t_n/\Delta V_n$. Ce increases as the pulse width increases and tends to the DC capacitance value as the pulse width becomes very long (~10 secs). After 2msecs, Fig 1 shows the voltage drop $V_{2ms} = (5.413 \text{ V} - 5.354 \text{ V}) =$ 59mV. Therefore Ce(2ms) = 1A x 2ms/59mV = 33.9mF. After 10ms, the voltage drop = 5.413 V - 5.295V = 118mV. Therefore Ce(10ms) = 1 A x 10ms/118mV = 84.7mF. The DC capacitance of an HW201 = 0.38 F. Note that ΔV , or IR drop, is not included because very little charge is removed from the capacitor during this time. Ce shows the time response of the capacitor and it is useful for predicting circuit behavior in pulsed applications.



Measurement of DC Capacitance


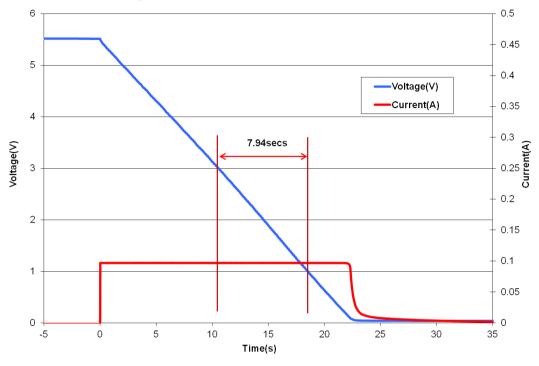




Fig 2 shows the measurement of DC capacitance by drawing a constant 100mA current from a fully charged supercapacitor and measuring the time taken to discharge from 1.5V to 0.5V for a single cell, or from 3V to 1V for a dual cell supercapacitor. In this case, $C = 0.1A \times 7.94s / 2V = 397mF$, which is well within the 380mF +/- 20% tolerance for an HW201 cell.

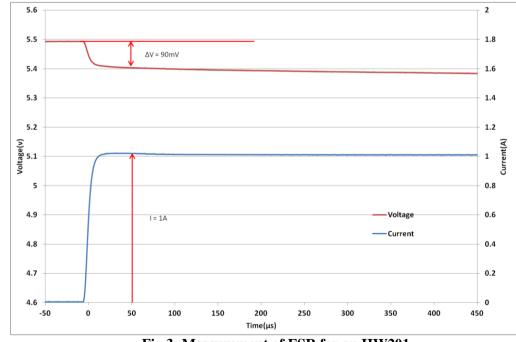

Measurement of ESR




Fig 3 shows DC measurement of ESR by applying a step load current to the supercapacitor and measuring the resulting voltage drop. CAP-XX waits for a delay of 50 μ s after the step current is applied to ensure the voltage and current have settled. In this case the ESR is measured as $90\text{mV}/1\text{A} = 90\text{m}\Omega$.



Effective Capacitance

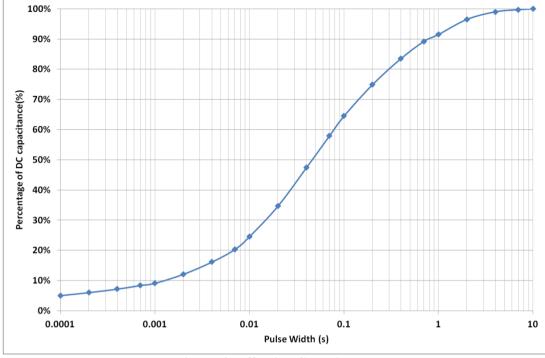


Figure 4: Effective Capacitance

Fig 4 shows the effective capacitance for the HW101, HW201 @ 23°C. This shows that for a 1msec PW, you will measure 9% of DC capacitance or 68.4mF for an HW101 or 34.2mF for an HW201. At 10msecs you will measure 25% of the DC capacitance, and at 100msecs you will measure 64% of DC capacitance. Ceffective is a time domain representation of the supercapacitor's frequency response. If, for example, you were calculating the voltage drop if the supercapacitor was supporting 1A for 10msecs, then you would use the Ceff(10msecs) = 25% of DC capacitance = 95mF for an HW201, so Vdrop = 1A x ESR + 1A x duration/C = 1A x 90m Ω + 1A x 10ms / 95mF = 195mV. The next section on pulse response shows how the effective capacitance is sufficient for even short pulse widths.

Pulse Response


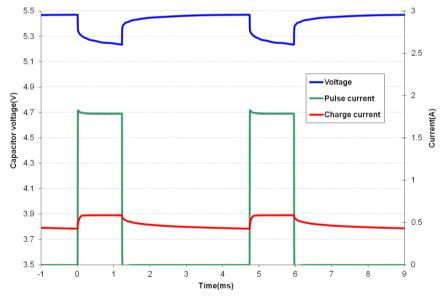


Fig 5 shows that the HW201 supercapacitor does an excellent job supporting a GPRS class 10 pulse train, drawing 1.8A for 1.1ms at 25% duty cycle. The source is current limited to 0.6A and the supercapacitor provides the 1.2A difference to achieve the peak current. At first glance the freq response of Fig 8 indicates the supercapacacitor would not support a 1ms pulse, but the Ceff of 34.2mF coupled with the low ESR supports this pulse train with only ~230mV droop in the supply rail.

Fig 5: HW201 Pulse Response with GPRS Class 10 Pulse Train



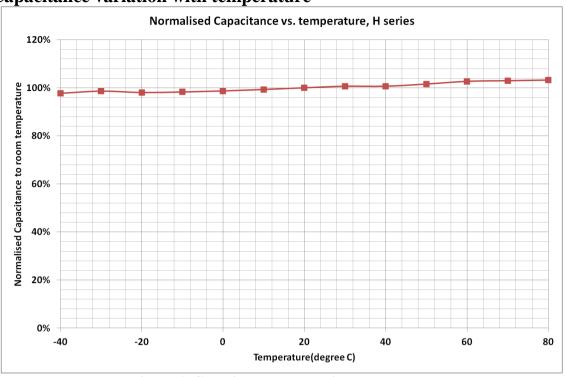

DC Capacitance variation with temperature





Fig 6 shows that DC capacitance is approximately constant with temperature.

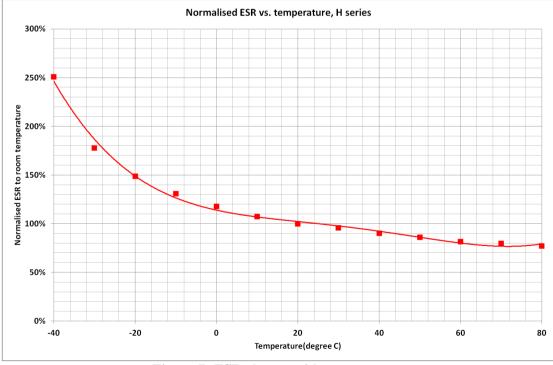

ESR variation with temperature

Figure 7: ESR change with temperature

Fig 7 shows that ESR at -40°C is ~2.5 x ESR at room temp, and that ESR at 70°C is ~0.8 x ESR at room temperature.



Frequency Response

HW101 Magnitude and Phase vs. Frequency


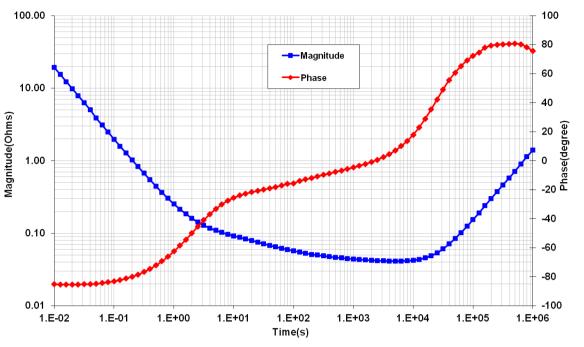


Fig 8: Frequency Response of Impedance (biased at 2.7V with a 50mV test signal)

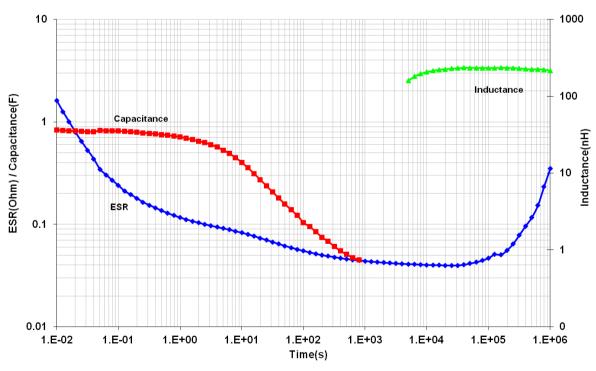

HW101 ESR, Capacitance and Inductance vs. Freqency

Fig 9: Frequency Response of ESR, Capacitance & Inductance

Fig 8 shows the supercapacitor behaves as an ideal capacitor until approx 2 Hz when the magnitude no longer rolls off proportionally to 1/freq and the phase crosses -45°. Performance of supercapacitors with frequency is complex and the best predictor of performance is Fig 4 showing effective capacitance as a function of pulsewidth.



Leakage Current


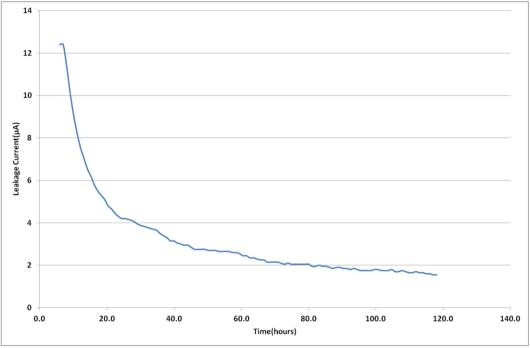


Fig 10: Leakage Current

Fig 10 shows the leakage current for HW101 at room temperature. The leakage current decays over time, and the equilibrium value leakage current will be reached after ~120hrs at room temperature. The typical equilibrium leakage current is 1.5μ A at room temperature. At 70°C leakage current will be ~10 μ A.




Charge Current

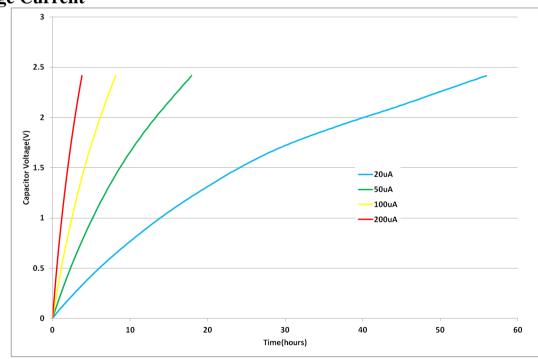

The corollary to the slow decay in leakage currents shown in Fig 10 is that charging a supercapacitor at very low currents takes longer than theory predicts. At higher charge currents, the charge rate is as theory predicts. For example, it should take $0.76F \times 2.4V / 0.00002A = 25hrs$ to charge a 0.76F supercapacitor to 2.4V at 20μ A, but Fig 11 shows it took 56hrs. At 100μ A charging occurs at a rate close to the theoretical rate.



RMS Current

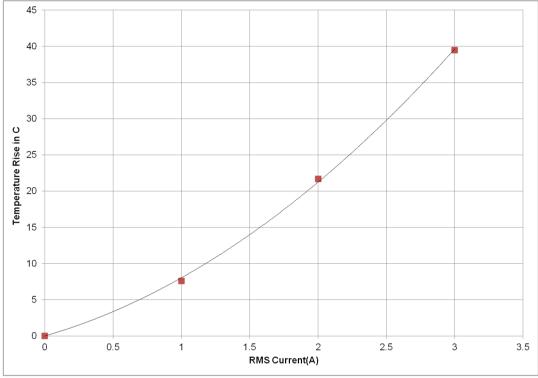



Continuous current flow into/out of the supercap will cause self heating, which limits the maximum continuous current the supercapacitor can handle. This is measured by a current square wave with 50% duty cycle, charging the supercapacitor to rated voltage at a constant current, then discharging the supercapacitor to half rated voltage at the same constant current value. For a square wave with 50% duty cycle, the RMS current is the same as the current amplitude. Fig 12 shows the increase in temperature as a function of RMS current. From this, the maximum RMS current in an application can be calculated, for example, if the ambient temperature is 40°C, and the maximum desired temperature for the supercapacitor is 70°C, then the maximum RMS current should be limited to 2.5A, which causes a 30°C temperature increase.

CAP-XX Supercapacitors Product Guide

Refer to the package drawings in the CAP-XX Supercapacitors Product Guide for detailed information of the product's dimensions, PCB landing placements, active areas and electrical connections.

Refer to the CAP-XX Supercapacitors Product Guide for information on endurance and shelf life, transportation and storage, assembly and soldering, safety and RoHS/EREACH certification.